

Style and Function
Vivace

Express my style.
Light up my home.



DIMMER SWITCHES



HOTEL
ACCESSORIES



TELECOMMUNICATION
ACCESSORIES



SOCKET OUTLETS



Schneider
Electric



KB31/1, KB31 KB32/1 KB33/1



KB34/1 KB31BPB



KB31D20NE KB31RD400 KB31RF250



KB15 KB25



KB113LS KB15/15 KB15/15N



KB15/5 KB426/16S



KB31TS KB32TS KB31TV



KB32TV KB31RJ5 KB31RJ6 KB32RJ5 KB32RJ6



KB32DMS KB31EKT KB31BD/C



KBT727V



KB30 KBT30

Flush Switches

KB31/1	16AX 250V 1 Gang 1 Way Switch
KB31	16AX 250V 1 Gang 2 Way Switch
KB32/1	16AX 250V 2 Gang 1 Way Switch
KB33/1	16AX 250V 3 Gang 1 Way Switch
KB34/1	16AX 250V 4 Gang 1 Way Switch
KB31D20NE	20A 250V Double Pole Switch With Neon
KB31BPB	Bell Press

Light Dimmer & Fan Controller

KB31RF250	Fan Speed Controller
KB31RD400	Light Dimmer

Socket Outlets

KB15/5	5A 3 Pin Round Switched Socket
KB15	13A 3 Pin Flat Switched Socket
KB25	13A 3 Pin Flat Duplex Switched Socket
KB113LS	13A International Switched Socket
KB15/15	15A 3 Pin Round Switched Socket
KB15/15N	15A 3 Pin Round Switched Socket with Neon
KB426/16S	16A 2 Pin + Earth Schuko Socket

Telecommunication Accessories

KB31TS	1 Gang Shuttered Telephone Outlet
KB32TS	2 Gang Shuttered Telephone Outlet
KB31TV	1 Gang TV Outlet
KB32TV	2 Gang TV Outlet
KB31RJK	1 Gang Shuttered Plate
KB32RJK	2 Gang Shuttered Plate
KB31RJ5	1 Gang Shuttered Cat 5e Data Outlet
KB32RJ5	2 Gang Shuttered Cat 5e Data Outlet
KB31RJ6	1 Gang Shuttered Cat 6 Data Outlet
KB32RJ6	2 Gang Shuttered Cat 6 Data Outlet

Hotel Accessories

KB31BD/C	1 Gang Bell Press with "DND" & "PCU" Symbols*
KB32DMS	2 Gang Switch with "DND" & "PCU" Symbols*
KB31EKT	Electronic Key Card Time Delay Switch
KBT727V	Universal Shaver Socket 115/240V

Blank Plates

KB30	1 Gang Blank Plate
KBT30	2 Gang Blank Plate

Surrounds

KB-21	2 Gang Surround
KB-31	3 Gang Surround
KB-41	4 Gang Surround

